


MEDIA SKIN



English Simple Manual (簡易英語版)

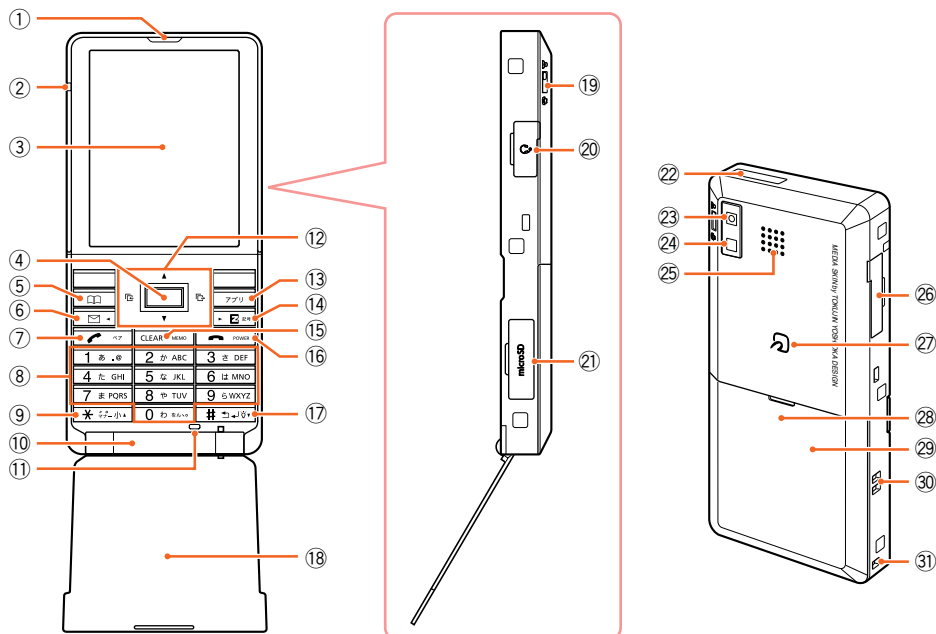

Nomenclature




- | | | |
|-------------------------------|------------------------------|----------------------------------------------------|
| ① Earphone | ⑫ Jog key | ⑳ Camera (lens) |
| ② Incoming/Charging indicator | ⑬ Application key | ㉑ Shooting light/Simple light |
| ③ Display | ⑭ EZ key | ㉒ Speaker |
| ④ Center key | ⑮ Clear/Memo key | ㉓ External connection jack |
| ⑤ Address key | ⑯ Power/End key | ㉔ FeliCa mark |
| ⑥ Mail key | ⑰ # key | ㉕ Battery pack cover
(battery pack compartment) |
| ⑦ Send key | ⑱ Flip cover | ㉖ au IC card (internal) |
| ⑧ Number keypad | ⑲ Macro mode selector switch | ㉗ Charging terminals |
| ⑨ * /Manner key | ㉑ Earphone jack | ㉘ Strap mount |
| ⑩ Antenna (built-in) | ㉒ microSD card slot | |
| ⑪ Microphone | ㉓ Infrared port | |

Turning the Power On and Off

- Turning the power on
Hold down  for at least one second.
- Turning the power off
Hold down  for at least two seconds.

Applying the EZweb Default Settings






To send and receive e-mail or use EZweb, you must first subscribe to EZweb. You should also apply the default settings before sending and receiving e-mail or using EZweb. Applying the default settings automatically sets your e-mail address.

From the stand-by screen: Press . → Press  [OK] (to begin applying the default settings). → Press  [OK] .










Checking Your Own Phone Number/E-mail Address

From the stand-by screen: Press . → Press  (displays your own phone number and e-mail address in the profile).







Making and Answering a Call

- Making a call
From the stand-by screen: Enter the phone number you want to call. → Press .
To end the call: Press .
- Answering a call
When the phone rings, press .
To end the call: Press .
To adjust the earpiece volume: Press .












Storing and Recalling Address Book Entries

- Storing an entry
From the stand-by screen: Press . → Press  [メニュー] (Menu), select 「新規登録」 (Add new) and press  [選択] (Select). → Select the item to be stored and press  [編集] (Edit). → Enter the data and press  [OK] . → Check the details and press  [完了] (End).
- Recalling an entry
From the stand-by screen: Press . → Press  to select the desired name. → Press .

Sending and Receiving (Reading) E-mails

- Sending an e-mail
From the stand-by screen: Press . → Select 「新規作成」 (New) and press  [選択] (Select).
→ Enter the recipient's e-mail address, the subject and the message by following the on-screen instructions. → Press  [送信] (Send).
- Receiving (reading) e-mail
When you receive e-mail, the phone emits the incoming e-mail tone and displays the new e-mail message 「新着Eメール△件」 (You have △ new e-mails) on the stand-by screen.
Select 「新着Eメール」 (New) and press  [確認] (Check). → Select the folder and press  [選択] (Select). → Select the e-mail you want to read and press  [表示] (Display).

 
Using the Camera (Photos and Movies)

- Taking a photo
From the stand-by screen: Press . → Select 「カメラ」 (Camera) and press  [選択] (Select). → Select 「フォト」 (Photo) and press  [選択] (Select). → Press  [撮影] (Shoot). → Press  [保存] (Store).
- Recording a movie
From the stand-by screen: Press . → Select 「カメラ」 (Camera) and press  [選択] (Select). → Select 「ムービー」 (Movie) and press  [選択] (Select). → Press  [録画] (Record). → Press  [終了] (End). → Press  [保存] (Store) *.

* If the movie mode is 「長時間」 (Long), the movie is automatically saved when recording ends.

Making an International Call

E.g.: To call 212-123-△△△△ in the USA



Other Handy Features

● Manner Mode

From the stand-by screen: Hold down for at least one second.

To disable Manner mode, repeat the above step.

● Take a Message

• Setup

From the stand-by screen: Hold down for at least one second.

To disable Take a Message, repeat the above step.

• Playback

From the stand-by screen: Press . → Select 「簡易留守メモ」 (Answer Phone) and press

【選択】 (Select) → Select 「メモ再生」 (Play message) and press 【選択】 (Select).

→ Select the message you want to listen to and press 【再生】 (Play).

For inquiries, please contact

au Customer Service Center (General Information)

● If you are calling from a landline phone: ☎ 0077-7-111 (toll free)

● If you are calling from an au mobile phone: 157 (toll free)